

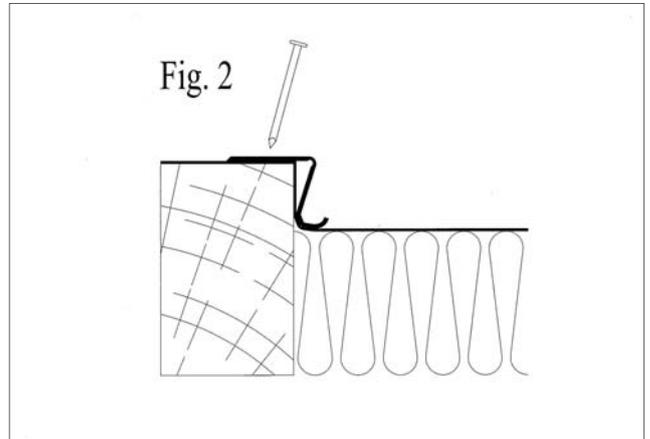
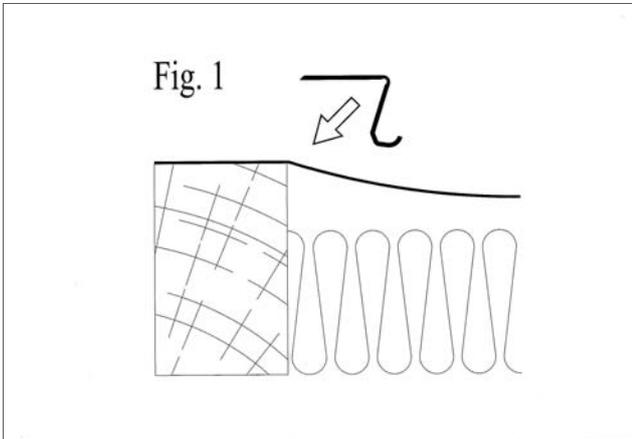


FIXING INSTRUCTIONS

CAVIT-E CLIP

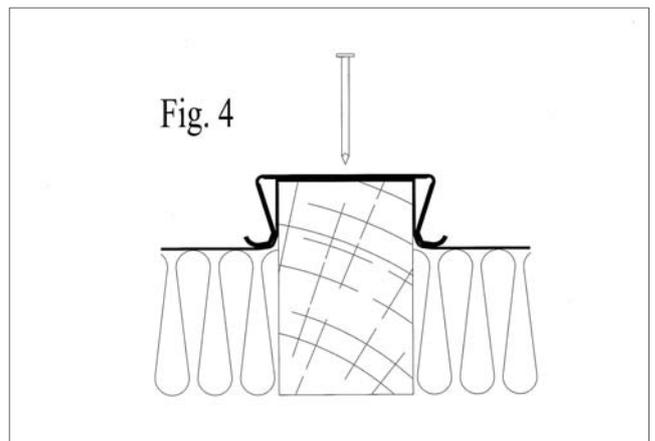

1. Tack the VC Foil Ultra along the length of the first stud to hold the membrane, press the Protect Cavit-E Clip end / corner unit firmly into place and nail into position (Fig. 1 & 2). Nails should be positioned 50mm in from each end and spaced at approximately 600mm centres along the length of the clip.
2. Pull the VC Foil Ultra across to the next stud using sufficient tension to ensure the membrane surface is wrinkle free.
3. Whilst maintaining tension on the VC Foil Ultra, gently pull the wings slightly apart at one end of the Protect Cavit-E Clip and slide it into position over the stud (Fig. 3). This will ensure the membrane maintains a 20mm airspace (after the plasterboard has been installed). Push the clip into place along the full length of the stud and fix using clout head nails (Fig. 4) positioning the nail as described in Step 1.

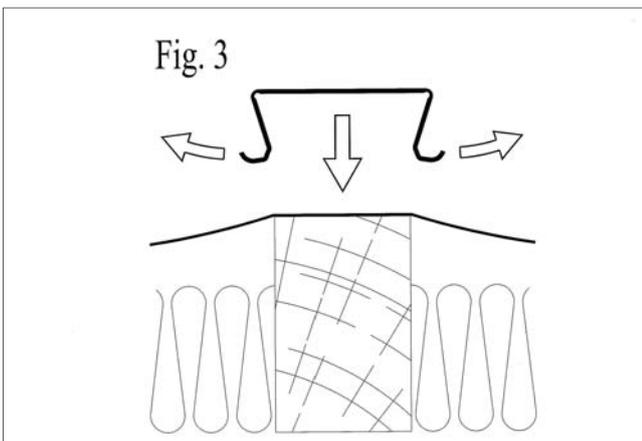

4. Repeat Step 3 as necessary.
5. At the end of the wall panel, fix a second Protect Cavit-E Clip end unit as per Step 1.
6. Once installed, the top and bottom edges of the VC Foil Ultra require folding to create a neat edge against the head and sole plates. Staple these edges in place and seal the edge with Reflective Reinforced Single Sided Tape to maintain the integrity of the airtight and vapour control layer.

Other products that can be used in unison here are: VC Tape, Ref SS Tape, BarriAir, Universal Tape, FCM750, Cavit-E corner .

Company names and product descriptions are the Registered Trade Marks of the relevant manufacturer
FOR FURTHER INFORMATION ON ALL PROTECT PRODUCTS PLEASE CONTACT:

PROTECT MEMBRANES

2 Brooklands Road, Sale, Cheshire, M33 3SS

Telephone: (+44) 0161 905 5700 Fax: (+44) 0161 905 2085 Web: www.protectmembranes.com Email: info@protectmembranes.com

BPD

A division of Building Product Design Ltd. Company Registration No: 3944123