




FIXING INSTRUCTIONS

ARCH AND BULLSEYE CAVITY TRAYS

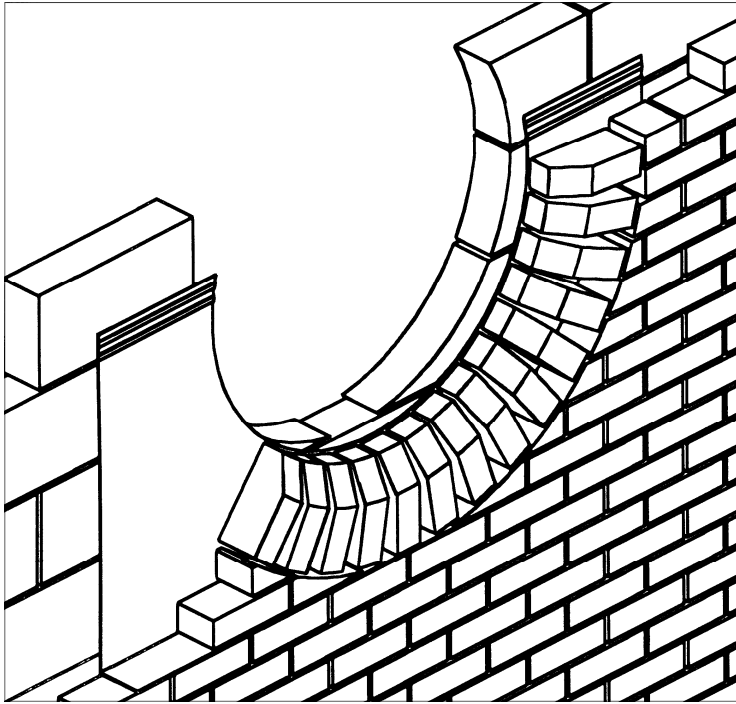

BULLSEYE TRAYS:


Build up the wall to 225mm below the window opening (three courses).

Using the crease as a guide, fold the return portion of the lower tray forward (see drawing) and bed on a thin layer of mortar.

Build up the wall around the window until you reach the underside of the lintel or 75mm (one course) from the top of the lower tray.

Remove the protective film from the butyl tape and stick the lower tray to the lintel or to the upper tray if there is no lintel.

Install the upper tray on a bullseye window as if it was an arch tray (see below).

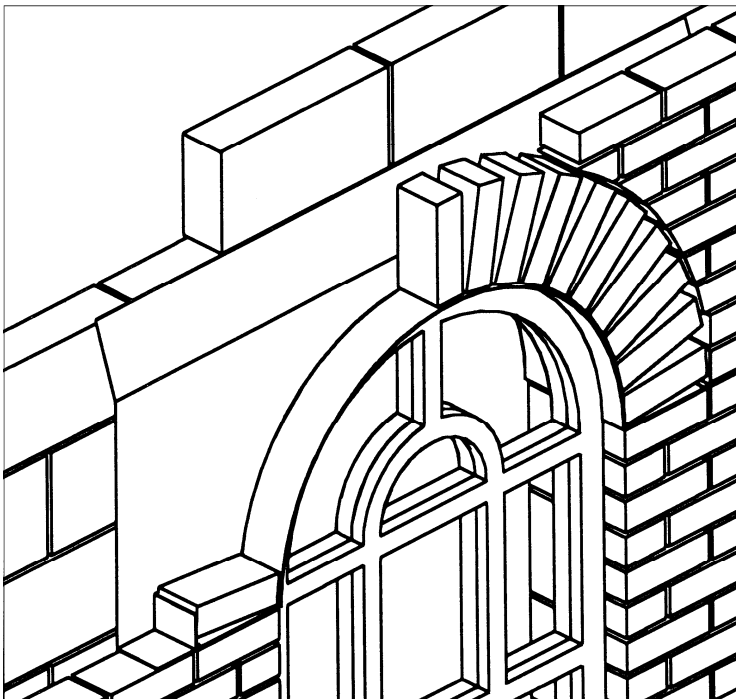

ARCH TRAYS:

Build up the wall to the level of the lintel / former.

Bed the tray on a layer of mortar.

Position the stop ends in an appropriate perpendicular joint and fix the bedweeps.

Lay a thin layer of mortar on the tray and proceed with the arch / bullseye.

Please note that these fixing instructions are to be read in conjunction with NHBC and British Standards recommendations and are to be used as a guide only

FOR ON-SITE TECHNICAL ASSISTANCE OR SALES ENQUIRIES CONTACT:

GLIDEVALE LIMITED

2 Brooklands Road, Sale, Cheshire M33 3SS Telephone: 0161 905 5700 Fax: 0161 905 2085
Email: info@glidevale.com Web: www.glidevale.com

Glidevale Limited maintains a policy of continuous development and reserves the right to amend product specifications with out notice.



A division of Building Product Design Ltd. Company Registration No: 3944123

