



FIXING INSTRUCTIONS - PROTECT 5000 FAÇADE FOR TIMBER FRAMED CONSTRUCTION

1. Attach roll to holder

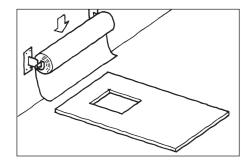


Factory fixing




2. Pull membrane taut over panel

 Unroll across sheathing parallel to sole plate


Site fixing

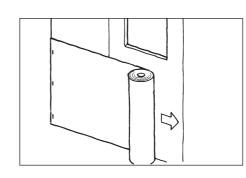


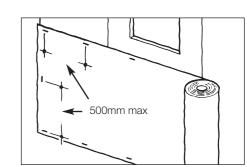

2. Secure membrane with austenitic stainless steel staples


Mark out stud positions for wall tie fixings

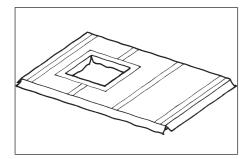


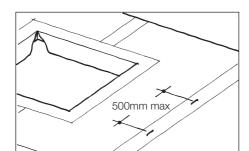

4. Secure membrane to sheathing with austenitic stainless steel staples, ensuring laps are taped


3. Ensure lowest timbers in wall are protected

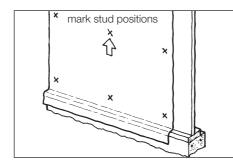


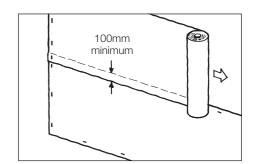


150mm

4. Fix second layer ensuring all laps are taped and repeat up to roof abutment



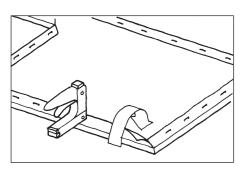

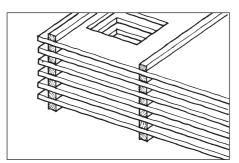


6. Store panels horizontally on battens to provide air space

5. Dress into door and window recesses and fix with staples

7. Fix patch to


shed water away

from sheathing

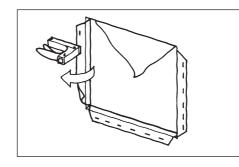

6. Replace damaged and torn membrane



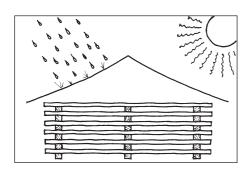


GENERAL


Protect 5000 Façade must not be exposed to continuous working temperatures in excess of 80°C, such as in direct contact with hot pipes, flues or electric heating cables.

In accordance with good building practice, this product should be covered as soon as possible after installation and preferably not more than one month after initial exposure. If the exposure period exceeds one month then advice must be sought from the Glidevale Protect Technical department.

No maintenance of Protect 5000 Façade is necessary once installed but it is important that the surface of the product remains clean during the installation process.

Protect 5000 Façade is for walls constructed with open jointed cladding which are exposed to UV, for use on the COLD side of the insulation.

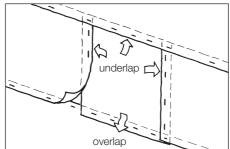

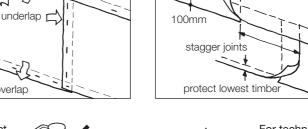

8. Lap membrane correctly

Do not use in direct contact with organic solvents





For technical advice telephone +44 (0)161 905 5700

Other products purchased with this membrane: Universal Tape

