
FIXING INSTRUCTIONS

protect

UNIVALLEY 125

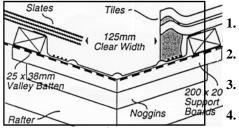


Fixing Instructions for Univalley 125

1. Fix noggins either side of rafters and 20mm below their top face.

- Fit support boards 200mm wide and 20mm deep between rafters to support valley trough.
- **3.** Lay a Length of roof underlay (1m wide) up the valley and overlap roof felt onto it.
 - Fix 25mm x 38mm counter battens up each side of the valley 125mm from the centreline. Batten out the roof.
- 5. Lay Univalley in position allowing 150mm overlap at joints and fix to couter battens.
- 6. For Slates, lay dry ensuring slates are cut to rake overhanging the upstand by 50mm.
- **7.** For tiles, bed onto sanded area ensuring tiles are cut neatly to rake. The mortar retention bar will aid neat mortar finish.

UBS BONDING STRIP

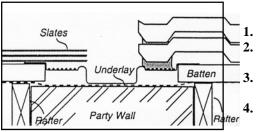

UBS Bonding Strip


Remove slates/tiles of adjacent roof over the party wall.
Cut batten ends of adjacent roof approximately 85mm from centre of party wall.

3. Felt and batten new roof ensuring new underlay is extended up to existing battens on adjacent roof.

4. Batten should finish approximately 85mm from centre of party wall.

- 5. Lay Bonding Strip in position allowing 150mm overlap at joints and fix to batten ends.
- 6. Re-slate/tile adjacent roof and bed if necessary onto sanded area. Slate/tile in new roof and bed if necessary onto sanded area.

BS 2X BONDING STRIP



BS 2X Bonding Strip

- **1.** Remove slates/tiles of adjacent roof over the party wall.
- **2.** Cut batten ends of adjacent roof approximately 85mm from centre of party wall.
- 3. Felt and batten new roof ensuring new

underlay is extended up to existing battens on adjacent roof.

- 4. Batten should finish approximately 85mm from centre of party wall.
- 5. Lay Bonding Strip in position allowing 150mm overlap at joints and fix to batten ends.
- 6. Re-slate/tile adjacent roof and bed if necessary onto sanded area. Slate/tile in new roof and bed if necessary onto sanded area.

Other products that can be used in unison here are: A1, A1T3, Wunderlay, VP300, Zytec and VP400 Plus^{LR} roofing underlays. All other Protect roofing accessories are suitable for use with these underlays and this product.

Company names and product descriptions are the Registered Trade Marks of the relevant manufacturer FOR FURTHER INFORMATION ON ALL PROTECT PRODUCTS PLEASE CONTACT:

.....

PROTECT MEMBRANES

2 Brooklands Road, Sale, Cheshire, M33 3SS

Telephone: (+44) 0161 905 5700 Fax: (+44) 0161 905 2085 Web: www.protectmembranes.com Email: info@protectmembranes.com

